




Online Print

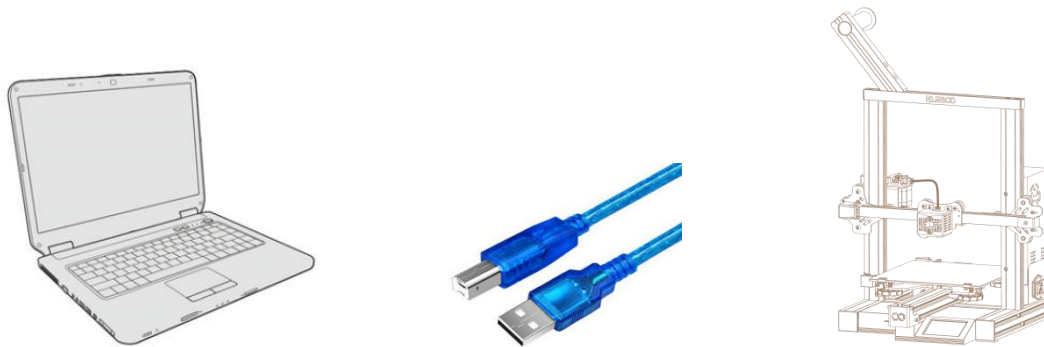


- Connect the printer and computer with USB cable, double-click to open the slicing software, select the corresponding model and then click on the monitor, if the interface shows a blank then it proves that the connection is not successful, you need to install the driver.

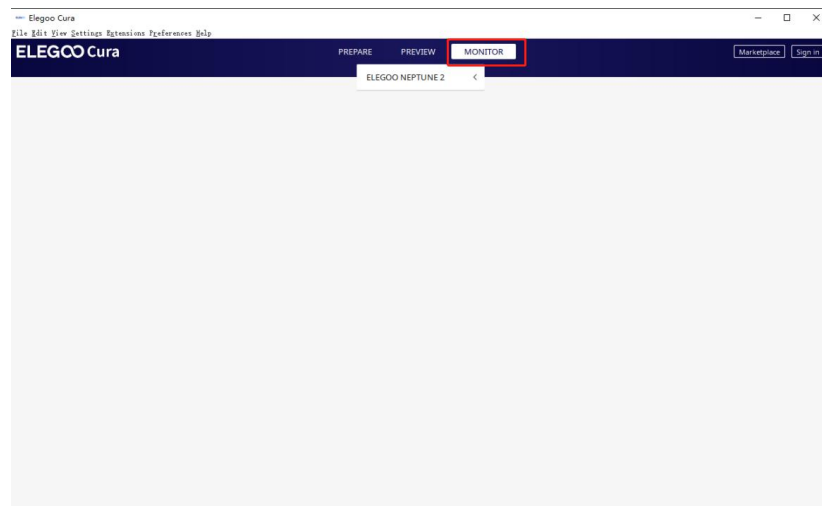

- The driver installation method is as follows: Open the profile of the TF card to select the path \ Software and Software Driver Folder \ Software Driver Folder \ CH340G USB Driver Folder \ Double-click the [DRVSETUP64] file to run it and click to install it.
- (As shown in the picture below.) Please note that this driver software has no virus, so please feel free to install it. If your antivirus software determines that it is a virus, you can close your antivirus software for a while and then continue to install the driver software.

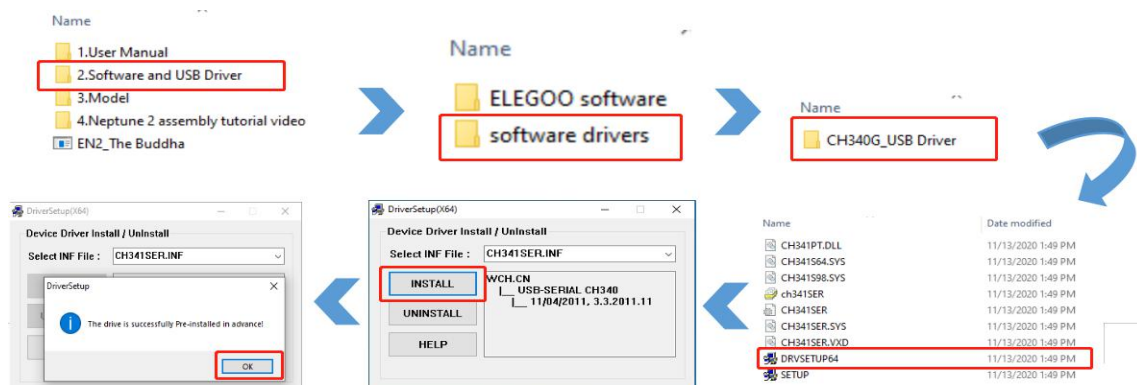

- After the driver installation is complete, reconnect the USB cable, open the ELEGOO slicing software, and then click on the monitor, if it display the printer model and other information, the computer has been successfully connected.

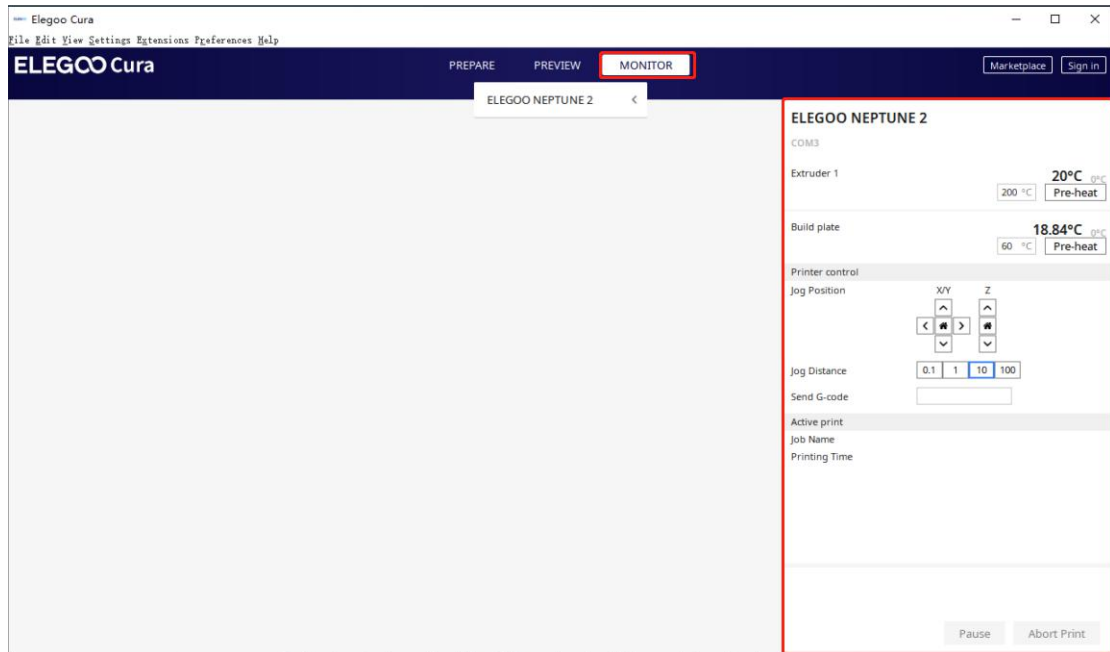

- After importing the model, set the print temperature, layer thickness and other relevant information, and then click on the 【slice】 , select the USB online printing.
- The power cannot be cut off and the computer cannot go into screensaver or hibernation mode when connected to printing via USB cable to prevent data transfer failure.

